


SEGA®



**COMPACT
FLOPPY DISK**

BEFORE USING COMPACT FLOPPY DISK, PLEASE READ THIS SECTION CAREFULLY.


Description

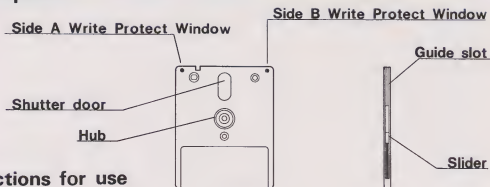


Directions for use

- This compact disk allows you to use both sides. If you were using a single side drive unit, please turn over the disk after you finished using one side.

- For protection of your program and/or data, please open the write protect hole completely by sliding write protect tab, fig. A.

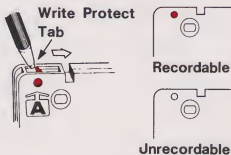

- When storing your Compact Floppy Disk, please make sure the guide hole of the case is matching with the guide slot.

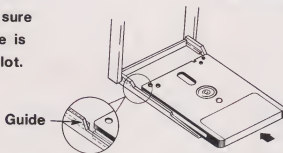

HANDLING AND STORAGE:

1. Don't push the shutter window and/or slider too firmly or it may cause a malfunction.
2. Don't touch the magnetic surface by opening the shutter door.
3. Please insure the hub is clean and don't alter the shape as it may cause reading errors.
4. Don't use eraser.
5. Don't use thinner, alcohol, and Freon, etc. for cleaning.
6. Please keep your Compact Floppy Disk in the protection case after use.
7. Don't expose to high temperature, humidity, or direct sunlight.
8. Don't smoke or drink near your Compact Floppy Disk.
9. Don't store your Compact Floppy Disk near strong magnetic fields.
10. Please avoid storing in dusty places.

CONDITION OF HANDLING AND STORAGE:

	Temperature	Humidity
Handling	50~125F (10~51.5°C)	20-80%
Storage	40~125F (4~51.5°C)	8-80%
Transport	-40~125F (-40~51.5°C)	8-90%

● In the event that this product fails to perform due to a defect in materials or workmanship, we will replace it if it is returned, postage prepaid, to **SEGA ENTERPRISES, LTD.**

Note: We will not be liable for any injury, loss, or damage, direct or consequential, arising out of the use of, or inability to use, this product.

For additional information:

Sega Enterprises, Ltd. 2-12, Haneda 1-chome, Ota-ku, Tokyo 144, Japan
Tel.: (03) 742-3171 Tlx: J22357 SEGASTAR Fax: (03) 745-3246